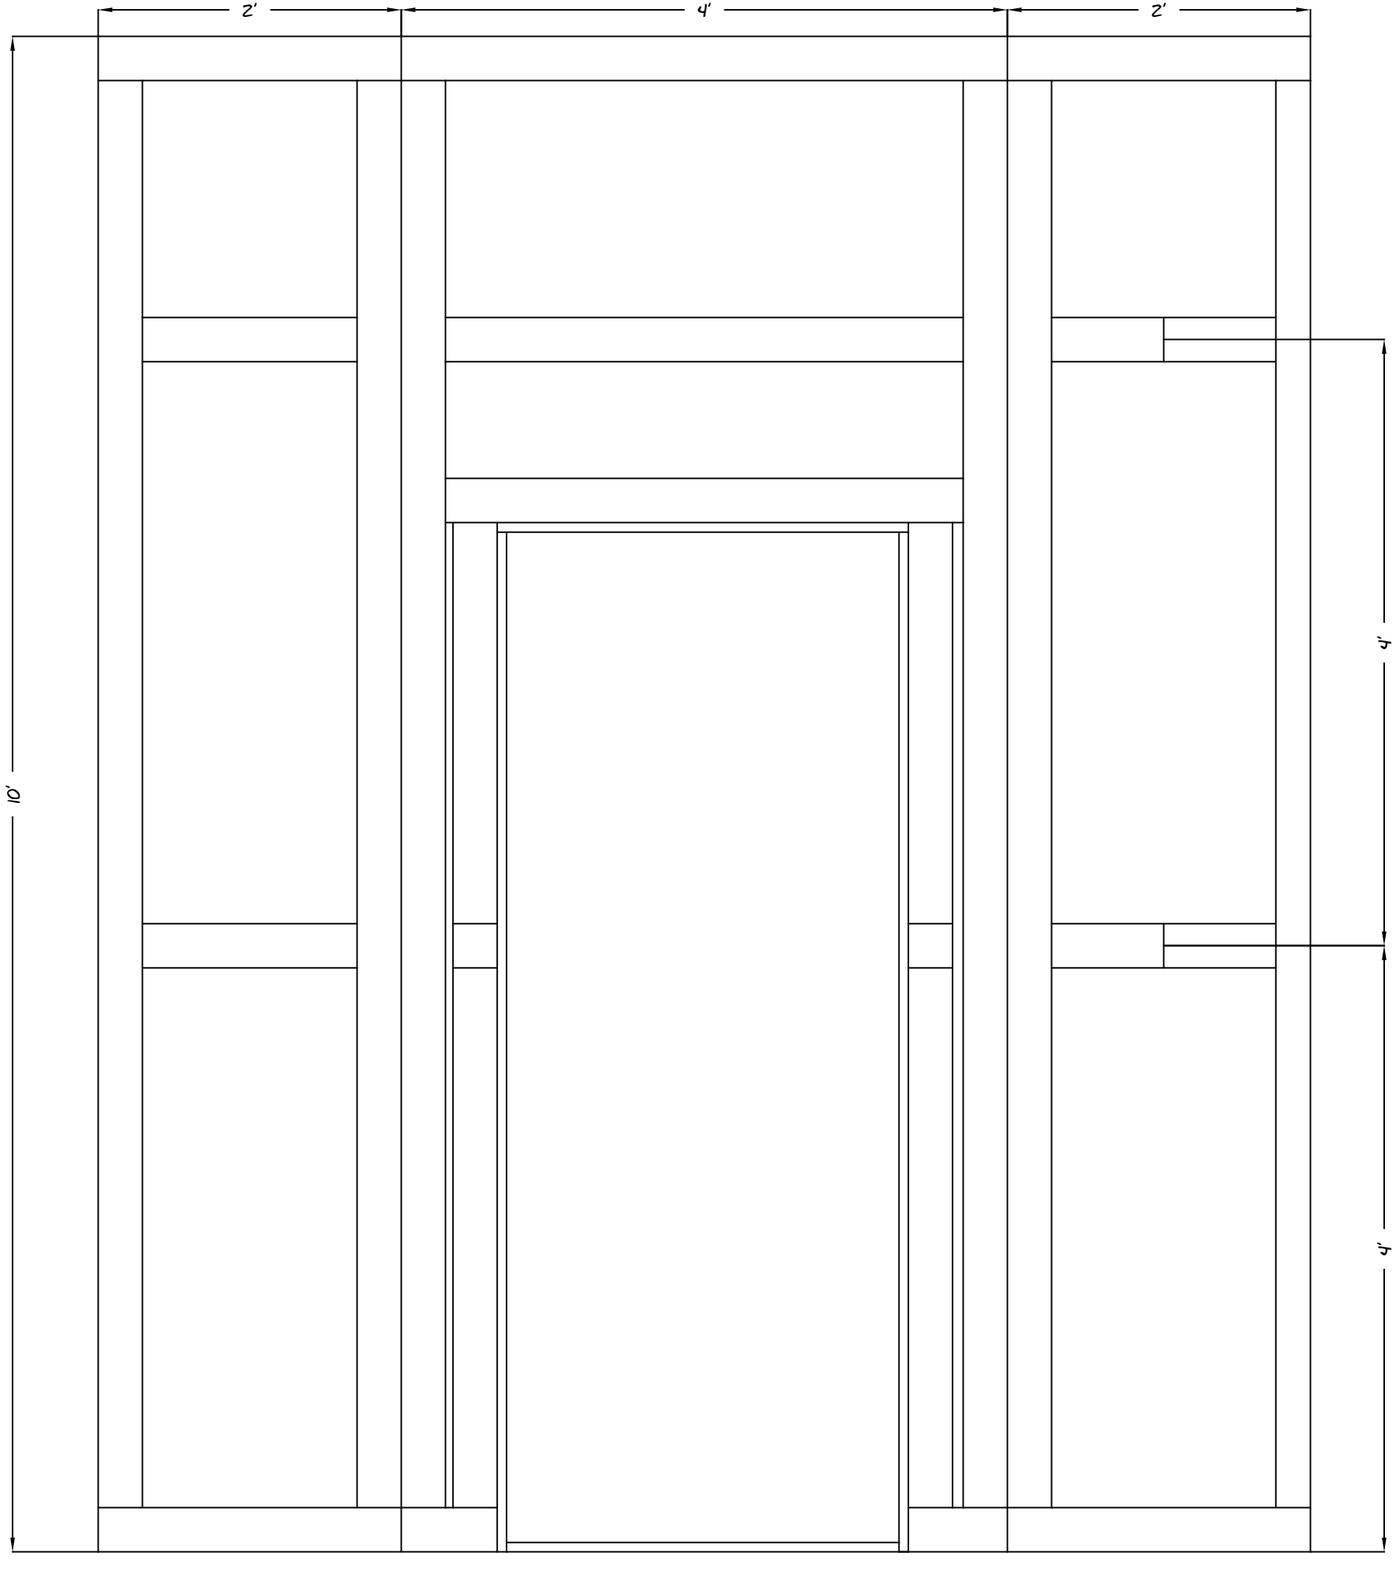


# Notes

1. Verify actual door dimensions.
2. Build casing $\frac{1}{4}$" wider to allow gap with door. Build $\frac{1}{2}$" taller.
3. Pre-hang door and install to standing flattage. Shim as necessary.
4. Secure US platform to stage deck prior to installing angle braces.
5. Angle bracing TBD.
6. Need to leave an entrance from SL, so may need to brace up and across from that side.
7. On US edge of the flats, add 8'-0" on-edge stiffener over top toggles and brace to that.

Bishop McNamara High School
Fine Arts and Theatre

present

Clue
High School Edition

| | | |
|---|---|---|
| Dir. Kamil Hazel | 10/16/2024 | 3/6 |
| Des. G.D. George | 1"=1'-0" | |

# Front Door Unit Flats and Door